

REF.	DESC.
SIM01001	SET SCREW
SIM01003	SHAKEPROOF LOCK WASHER
SIM01004	AIR DEFLECTOR
SIM01005	REAR VALVE SEAT
SIM01006	O-RING
SIM01007	THROTTLE SPRING
SIM01008	THROTTLE SPRING LOCATOR
SIM01009	THROTTLE VALVE SCREW
SIM01010	VALVE SCREW WASHER
SIM01011	O-RING SUPPORT
SIM01012	O-RING
SIM01013	O-RING CENTER SUPPORT
SIM01014	THROTTLE VALVE SPACER
SIM01016	FRONT VALVE SEAT
SIM01017	THROTTLE STEM
SIM01018	BUTTON HEAD CAP SCREW
SIM01020	TRIGGER GUARD
SIM01021	FLEXLOC NUT
SIM02023	STUD
SIM01027	HOUSING
SIM01028	SET SCREW
SIM01029	O-RING
SIM01030	PISTON
SIM01031	CYLINDER GASKET
SIM02032	PISTON STOP SPACER
SIM0135R	SIDE PLATE (RIGHT)
SIM0135L	SIDE PLATE (LEFT)
SIM01036	ROLL PIN
SIM01037	TRIGGER
SIM01039	SOCKET HEAD CAP SCREW
SIM02040	UPPER JAW
SIM01041	JAW BUSHING
SIM01043	LATCH PIN CLIP

REF.	DESC.
SIM01044	LATCH SPRING
SIM01045	LATCH
SIM02046	ROLLER
SIM02047	FEEDER BLADE
SIM02048	PISTON ROD
SIM01049	ROLLER PIN
SIM02050	LOWER JAW
SIM01051	FEEDER ARM
SIM01056	WASHER
SIM01057	NUT
SIM01058	SCREW
SIM01059	INLET BUSHING
SIM01064	SOCKET HEAD CAP SCREW
SIM01067	ANUT
SIM02068	PUSHER
SIM01069	EXTRUDED RIVET
SIM01070	PUSHER SPRING
SIM01071	BUTTON HEAD SCREW
SIM02073	MAGAZINE BODY
SIM02074	JAW BOLT
SIM02075	MAGAZINE SPRING
SIM02076	MAGAZINE SHOE
SIM02077	ROLL PIN
SIM01078	MAGAZINE SHIM
SIM0178A	MAGAZINE SHIM
SIM01079	WASHER
SIM02080	GUARD
SIM02081	GUARD SCREW
SIM02082	CLIP ANTI-BACKUP
SIM02083	SCREW
SIM01086	PLATE SCREW
SIM01089	FLEXLOC NUT
SIM02204	FEEDER GUID RAIL

