

REF.	DESC.
SIM01001	SET SCREW
SIM01003	SHAKEPROOF LOCK WASHER
SIM01004	AIR DEFLECTOR
SIM01005	REAR VALVE SEAT
SIM01006	O-RING
SIM01007	THROTTLE SPRING
SIM01008	THROTTLE SPRING LOCATOR
SIM01009	THROTTLE VALVE SCREW
SIM01010	VALVE SCREW WASHER
SIM01011	O-RING SUPPORT
SIM01012	O-RING
SIM01013	O-RING CENTER SUPPORT
SIM01014	THROTTLE VALVE SPACER
SIM11015	NUT
SIM01016	FRONT VALVE SEAT
SIM01017	THROTTLE STEM
SIM01018	BOTTOM HEAD CAP SCREW
SIM11019	V HANGER
SIM01020	TRIGGER GUARD
SIM01021	FLEXLOC NUT
SIM11022	HANGER RING
SIM11025	SET SCREW
SIM11026	SET SCREW
SIM21027	HOUSING WITH RUBBER GRIP
SIM01028	SET SCREW
SIM21029	O-RING
SIM21030	PISTON
SIM21031	CYLINDER GASKET
SIM21032	PISTON STOP SPACER
SIM11033	CYLINDER
SIM11034	O-RING
SIM2135R	SIDE PLATE (RIGHT)
SIM2135L	SIDE PLATE (LEFT)
SIM01036	PIN
SIM01037	TRIGGER
SIM21039	SET SCREW
SIM23040	UPPER JAW
SIM01041	JAW BUSHING
SIM01043	LATCH PIN CLIP
SIM21044	LATCH SPRING

REF.	DESC.
SIM21045	LATCH
SIM01046	ROLLER
SIM23047	FEEDER BLADE
SIM21048	PISTON ROD
SIM01049	ROLLER PIN
SIM23050	LOWER JAW
SIM21M051	FEEDER ARM
SIM01M052	PLASTIC WASHER
SIM11M55L	FEEDER GUID RAIL
SIM11056	WASHER
SIM11057	NUT
SIM11058	SCREW
SIM01059	INLET BUSHING
SIM01M064	PUSHER SPRING
SIM01M067	MAGAZINE SET
SIM02M068	PUSHER
SIM01M069	STOP RING
SIM11071	SCREW
SIM02M073	MAGAZINE BODY
SIM02074	JAW BOLT
SIM02075	MAGAZINE SPRING
SIM02M076	MAGAZINE SHOE
SIM02077	ROLL PIN
SIM01078	MAGAZINE SHIM
SIM0178A	MAGAZINE SHIM
SIM01079	WASHER
SIM02082	CLIP ANTI-BACKUP
SIM01M086	WASHER
SIM01M094	PUSHER PIN
SIM01M097	SPRING ROLL
SIM21M200	HOUSING ASSY.
SIM23202	PISTON ROD ASSY.
SIM21M203	SIDE PLATE ASSY.
SIM02M205	PUSHER ASSY.
SIM02M206	MAGAZINE ASSY.
SIM11208	SPRING ASSY.
SIM01M210	SPRING ASSY. (53+70)
24	--
83	--

