


Grapadora neumática simG90 | Pneumatic stapler simG90

Explosionado - Exploded view

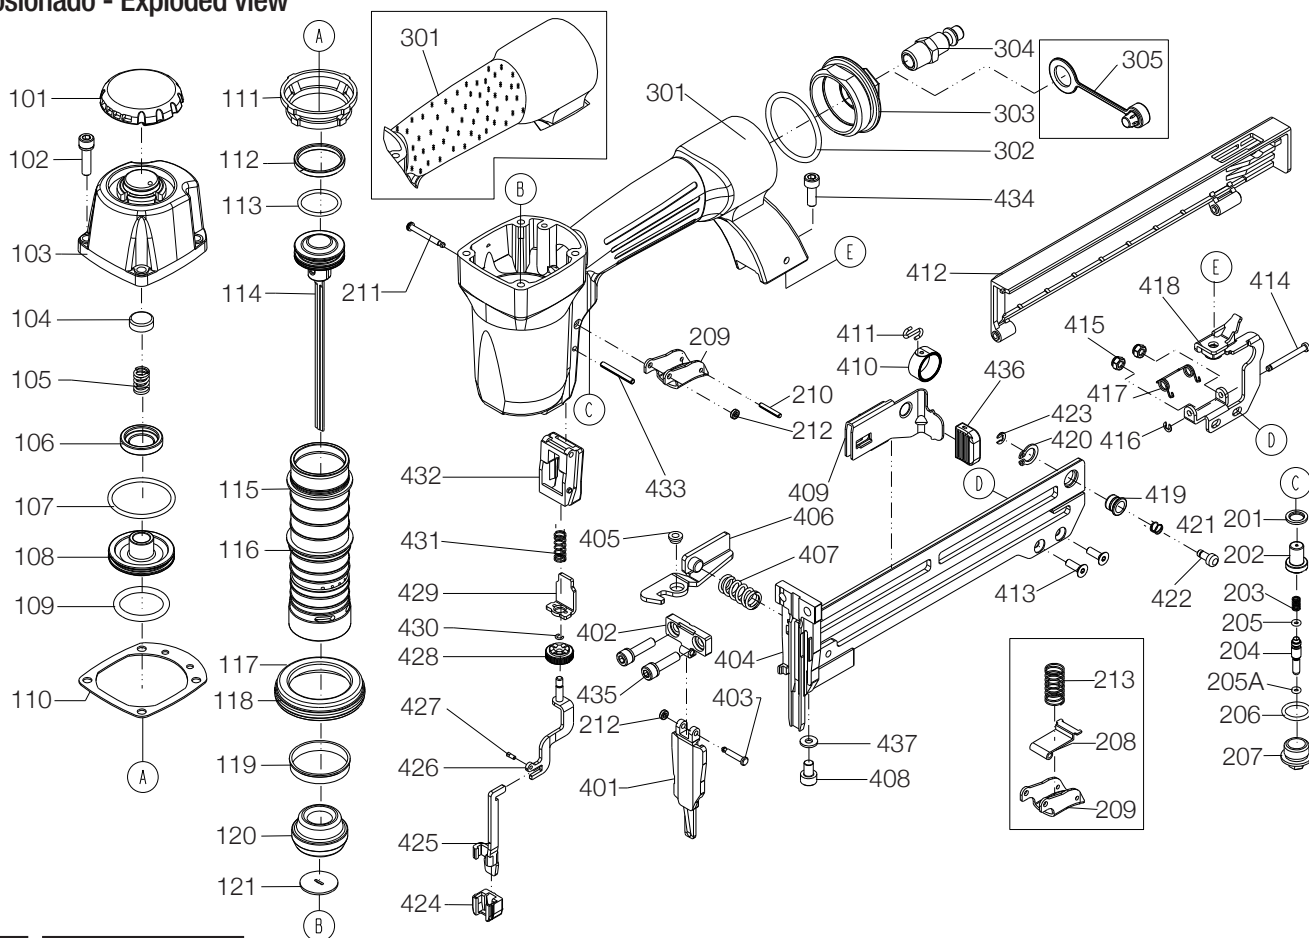

simG90

1205140

Despiece - Spare part list

Nº	COD.	DESC.
101	4450101	DEFLECTOR
102	9725101	BOLT ASSY
103	4450103	CAP
104	9725104	SEAL
105	9725105	COMPRESSION SPRING
106	4450106	OIL SEAL
107	4450107	O - RING
108	4450108	HD.VALVE PISTON
109	4450109	O - RING
110	4450110	PACKING
111	4450111	COLLAR
112	4450112	PISTON RING
113	9040113	O - RING
114	9040114	DRIVER UNIT
115	4450115	CYLINDER
116	9725108	O - RING
117	4450117	CYLINDER SPACER
118	4450118	O - RING
119	4450119	CYLINDER RING
120	9040120	BUMPER
121	9040121	DRIVER GUIDE
201	4450201	SEAL
202	4450202	TRIGGER VALVE HEAD
203	9725203	SPRING
204	9725204	PLUNGER
205	7150209	O - RING

Nº	COD.	DESC.
205A	9725205A	O - RING
206	9040206	O - RING
207	4450207	PLUNGER CAP
208	9040218	SECONDARY TRIGGER
209	9040219	TRIGGER
210	9920402	SPRING PIN
211	2264215	TRIGGER PIVOT PIN
212	2264216	RETAINER
213	4450208	SPRING
301	9040301	GUN BODY UNIT
302	1250303	O - RING
303	9040303	END CAP
304	130305	AIR PLUG
305	130304	DUSTY COVER
401	9040401	DRIVER GUIDE COVER A
402	9040402	DRIVER GUIDE COVER B
403	9040403	FIXED PIN
404	9040404	DRIVER GUIDE UNIT
405	9040405	MAGAZINE SPACER
406	9040406	LATCH
407	9040407	LOCK.SPRING
408	7116410	HEX. SOC. HD. BOLT
409	9040409	PUSHER
410	4450412	SPRING
411	4450413	SPRING RETAINER
412	9040412	MOUNTING BRACKET

Nº	COD.	DESC.
413	9040413	COUNTER SUNK SCREW
414	9040414	LATCH PIN
415	645310	LOCK NUT
416	9725418	E - RING
417	9040417	SPRING
418	9040418	BRACKET
419	9040419	DOOR LATCH COVER
420	4450422	SNAP RING
421	6774431	LATCH SPRING
422	9040422	DOOR LATCH
423	9920429	E - RING
424	9040424	PROTECTIVE CASING
425	9040425	SAFETY A
426	9040426	SAFETY B
427	9040427	PIN
428	15364436	ADJUST AXIE
429	4450430	SAFETY
430	18350429	RING
431	15364433	SAFETY SPRING
432	9040432	SAFETY GUIDE
433	9040433	SPRING PIN
434	15364419	HEX. SOC. HD. BOLT
435	9725427	BOLT ASSY
436	4450426	PUSHER CUSHION
437	9040437	FLAT WASHER