


Clavadora simG4450

Explosionado - Exploded view

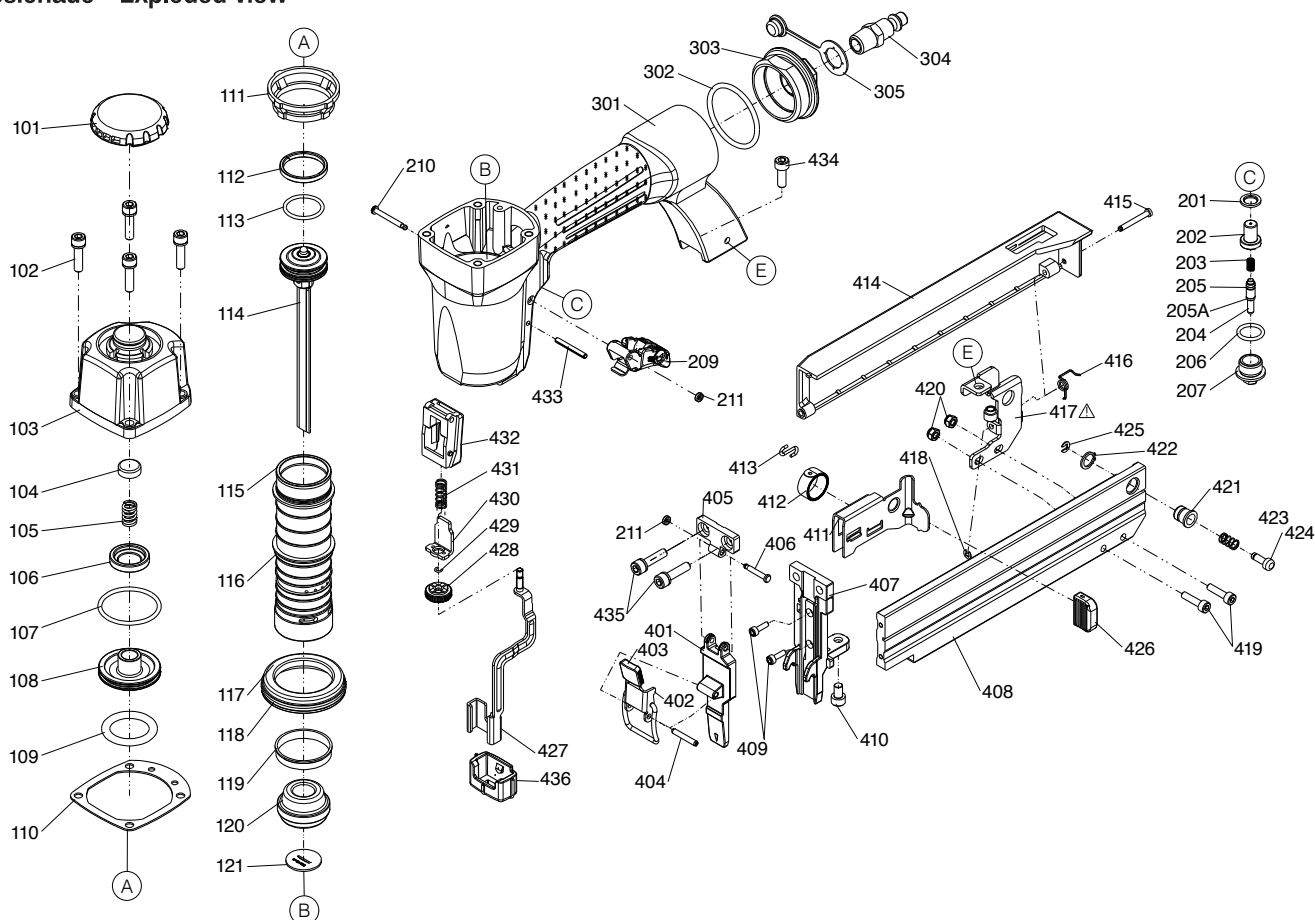

simG4450

1205150

Despiece - Spare part list

REF.	COD.	DESC.	REF.	COD.	DESC.	REF.	COD.	DESC.
101	4450101	DEFLECTOR	205	7150209	O - RING	414	4450414	MOUNTING BRACKET
102	9725101	BOLT ASSY	205A	9725205A	O - RING	415	4450415	LATCH PIN
103	4450103	CAP	206	9040206	O - RING	416	4450416	SPRING
104	9725104	SEAL	207	4450207	PLUNGER CAP	417	4450417	BRACKET UNIT
105	9725105	COMPRESSION SPRING	209	4450219	TRIGGER UNIT	418	9725418	E - RING
106	4450106	OIL SEAL	210	2264215	TRIGGER PIVOT PIN	419	4450419	HEX. SOC. HD. BOLT
107	4450107	O - RING	211	2264216	RETAINER	420	645310	LOCK NUT
108	4450108	HD. VALVE PISTON	301	4450301	GUN BODY UNIT	421	4450421	DOOR LATCH COVER
109	4450109	O - RING	302	1250303	O - RING	422	4450422	SNAP RING
110	4450110	PACKING	303	4450303	END CAP	423	4450423	LATCH SPRING
111	4450111	COLLAR	304	130305	AIR PLUG	424	4450424	DOOR LATCH
112	4450112	PISTON RING	305	130304	DUSTY COVER	425	9920429	E - RING
113	9040113	O - RING	401	4450401	DRIVER GUIDE COVER A	426	4450426	PUSHER CUSHION
114	4450114	DRIVER UNIT	402	4450402	LOCK HANDLE UNIT	427	4450427	SAFETY A UNIT
115	4450115	CYLINDER	403	15364437	PUSHER CUSHION	428	15364436	ADJUST AXIE
116	9725108	O - RING	404	7190212	SPIRAL PINS	429	18350429	RING
117	4450117	CYLINDER SPACER	405	4450405	DRIVER GUIDE COVER B	430	4450431	SAFETY
118	4450118	O - RING	406	4450406	FIXED PIN	431	7150434	SAFETY SPRING
119	4450119	CYLINDER RING	407	4450407	DRIVER GUIDE	432	9040432	SAFETY GUIDE
120	4450120	BUMPER	408	4450408	MIDDLE STRIP	433	9040433	SPRING PIN
121	4450121	DRIVER GUIDE	409	645407	HEX. SOC. HD. BOLT	434	15364419	HEX. SOC. HD. BOLT
201	4450201	SEAL	410	4450410	HEX. SOC. HD. BOLT	435	9725427	BOLT ASSY
202	4450202	TRIGGER VALVE HEAD	411	4450411	PUSHER	436	4450436	PROTECTIVE CASING
203	9725203	SPRING	412	4450412	SPRING			
204	9725204	PLUNGER	413	4450413	SPRING RETAINER			