




Clavadora para pins simPB0645 - Pinner simPB0645

Explosionado - Exploded view

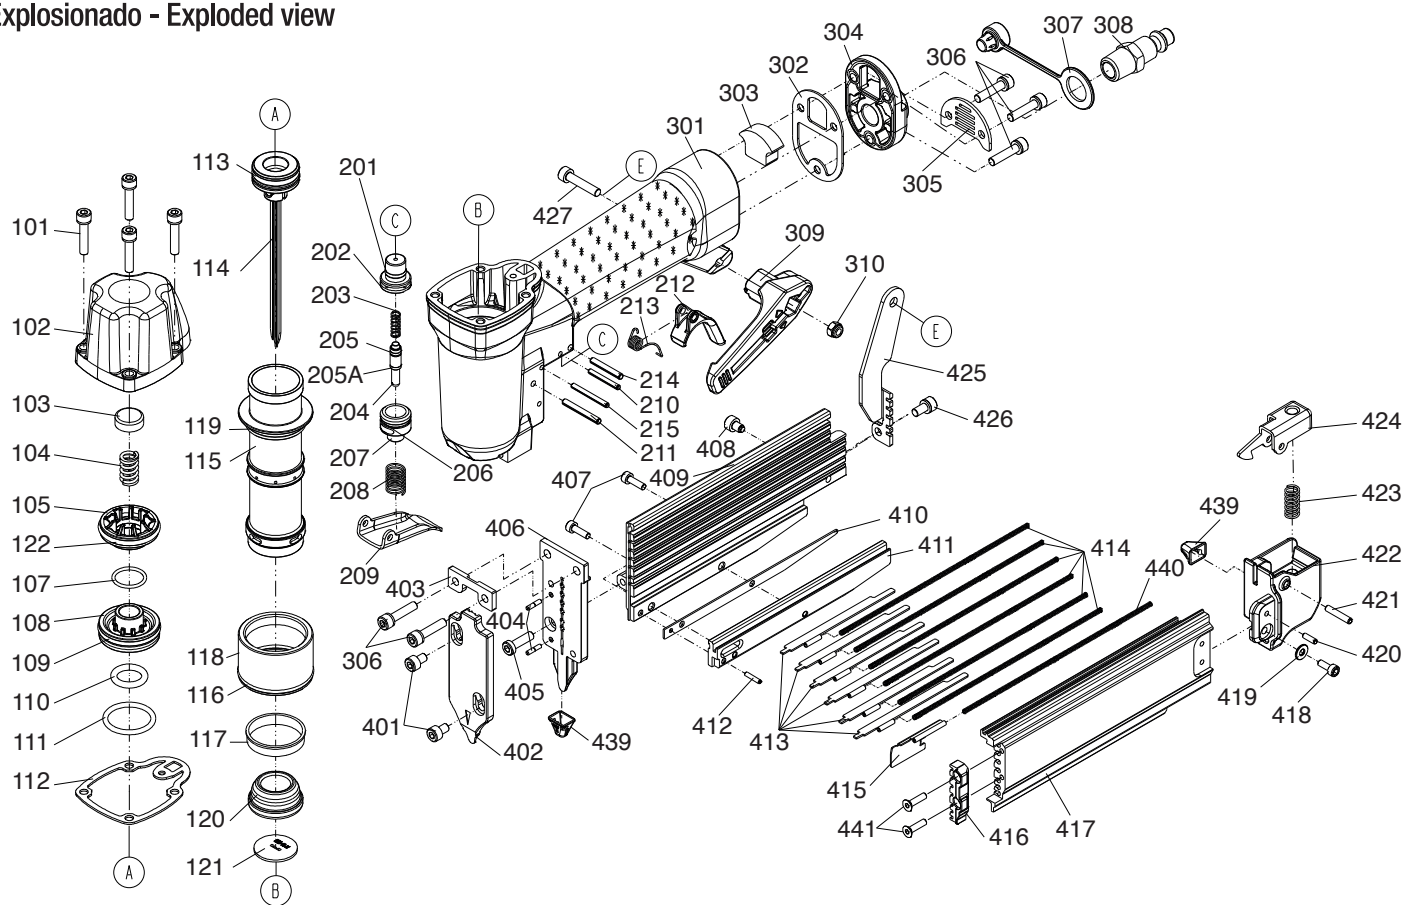

simPB0645

1205645

Despiece - Spare part list

Nº	REF.	DESC.
101	645101	TORNILLO CABEZA / BOLT ASSY
102	645102	TAPA / CAP
103	9725104	SELLO / SEAL
104	845104	RESORTE COMPRESIÓN / COMPRESSION SPRING
105	845105	COLLAR DE LA VÁLVULA / COLLAR
107	645107	JUNTA / O - RING
108	645108	VÁLVULA PISTÓN / HD. VALVE PISTON
109	645109	JUNTA / O - RING
110	645110	JUNTA / O - RING
111	7157407	JUNTA / O - RING
112	645112	SELLO CABEZA / PACKING
113	646113	JUNTA / O - RING
114	645114	PISTÓN LENGÜETA / DRIVER UNIT
115	645115	CILINDRO / CYLINDER
116	9725108	JUNTA / O - RING
117	645117	CILINDRO ARANDELA / CYLINDER RING
118	645118	CYLINDER SPACER / ESPACIADOR CAMISA
119	645119	JUNTA / O - RING
120	645120	TOPE PISTON / BUMPER
121	645121	PISTÓN LENGÜETA / DRIVER GUIDE
122	645122	JUNTA / O - RING
201	9725201	JUNTA / O - RING
202	9725202	VÁLVULA CABEZA GATILLO / TRIGGER VALVE HEAD
203	9725203	MUELLE / SPRING
204	9725204	VÁSTAGO DISPARO / PLUNGER
205	7150209	JUNTA / O - RING
205A	9725205A	JUNTA / O - RING

Nº	REF.	DESC.
206	645206	JUNTA / O - RING
207	9725207	TAPÓN ALOJAMIENTO VÁSTAGO
208	645208	MUELLE / SPRING
209	646209	GATILLO / TRIGGER
210	9725208	PASADOR MUELLE / SPRING PIN
211	645211	PASADOR MUELLE / SPRING PIN
212	635210	SEGURO / SAFETY STOPPER
213	645213	MUELLE / SPRING
214	3490403	PASADOR MUELLE / SPRING PIN
215	645215	PASADOR MUELLE / SPRING PIN
301	645301	CARCASA / GUN BODY UNIT
302	845302	JUNTA / GASKET
303	645303	FILTRO / MUFFLER
304	845304	TAPA FINAL / END CAP
305	645305	GUÍA PLETINA / GUIDE PLATE
306	645306	CONJUNTO TORNILLOS / BOLT ASSY
307	130304	TAPÓN RACORD / DUSTY COVER
308	130305	TOMA DE AIRE / AIR PLUG
309	645309	GANCHO COLGADOR / SPRING RETAINER
310	645310	TUERCA BLOQUEO / LOCK NUT
401	645401	TUERCA HEX. / HEX. SOC. HD. BOLT
402	645402	GUÍA TAPA MORRO A / DRIVER GUIDE COVER A
403	635403	GUÍA TAPA MORRO B / DRIVER GUIDE COVER B
404	646404	PASADOR / PIN
405	645405	TUERCA HEX. / HEX. SOC. HD. BOLT
406	645406	TRASERA MORRO / DRIVER GUIDE

Nº	REF.	DESC.
407	645407	TUERCA HEX. / HEX. SOC. HD. BOLT
408	645408	TORNILLO / SCREW
409	645409	GUÍA CARGADOR / MAGAZINE GUIDE
410	645410	PLETINA / FLAT BAR
411	645411	GUÍA CARGADOR / MAGAZINE GUIDE
412	9725402	PASADOR MUELLE / SPRING PIN
413	645413	ESPACIADOR PISTA / SPACER
414	645414	MUELLE COMPRESION / SPRING A COMPRESSION
415	645415	EMPUJADOR / PUSHER
416	645416	SOPORTE FIJO / FIXED SUPPORT
417	645417	CARGADOR B / MAGAZINE B
418	645418	TUERCA HEX. / HEX. SOC. HD. BOLT
419	645419	ARANDELA PLANA / FLAT WASHER
420	645420	PASADOR MUELLES / PRING PIN
421	645421	PASADOR MUELLES / SPRING PIN
422	645422	PROTECTOR CIERRE PISTA / PROTECTING HOOD COVER
423	645423	MUELLE BLOQUEO / LOCK SPRING
424	645424	CIERRE / LATCH
425	645425	SOPORTE CARCASA PISTA / BRACKET UNIT
426	645426	CONJUNTO TORNILLOS / BOLT ASSY
427	645427	TUERCA HEX. / HEX. SOC. HD. BOLT
439	645439	PROTECTOR SEGURO / PROTECTIVE CASING B
440	645440	MUELLE EMPUJADOR / PUSHER SPRING
441	645441	TORNILLO PISTA / COUNTER SUNK SCREW