


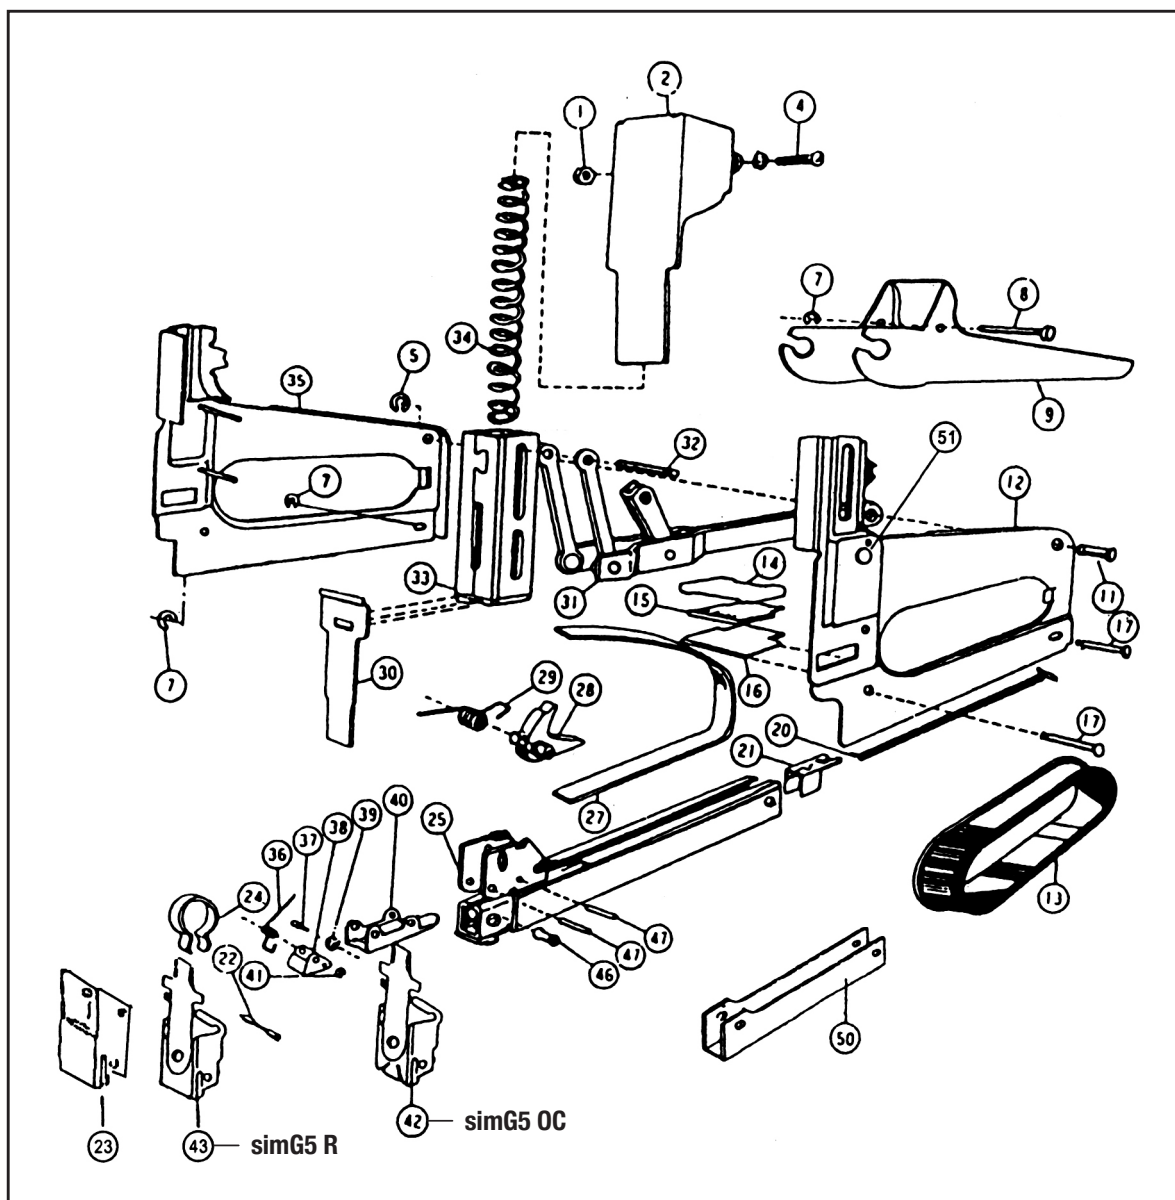

ORDER PARTS BY FULL DESCRIPTION

- | | | |
|-------------------------------|---|------------------------------------|
| 1. HN1032 NUT | 20. 0615 PUSHER SPRING | 35. 06565 G5 BODY(RIGHT) |
| 2. 06411 G5 CASE CAP | 21. 0679 PUSHER | 36. 0607 ROLL STOP SPRING |
| 4. UA3310.3 SCREW | 22. 06447 DOOR PIVOT | 37. 0614 ROLL STOP PIN |
| 5. 85981 LARGE E-RING | 23. 05175 REGULAR DOOR PIVOT MOUNT | 38. 0613 STOP ROLL CAGE |
| 7. 85018 SMALL E-RING | 24. 06400 DOOR SPRING | 39. 0612 STOP ROLL |
| 8. 05516 LEVER PIN | 25. 05410 CORE ASSEMBLY (INCLUDES 20,21,36, 37,38,39,40,41) | 40. 0611 STAPLE SHIELD |
| 9. 06437 OPERATING LEVER | | 41. 0608 SPACER |
| 11. 05507 PIVOT PIN | 27. 06496 LEVER SPRING | 42. M5019 OC DOOR |
| 12. 06566 G5 BODY(LEFT) | 28. T5007 PAWL | 43. M5175 REGULAR DOOR WITH SPRING |
| 13. 06450 GRIP | 29. 06433 PAWL SPRING | 46. 06180 ROLL |
| 14. 06408 BUMPER | 30. 06574 DRIVER | 47. 0606 RIVET |
| 15. 06407 TOP BUMPER PLATE | 31. 06424 PLUNGER LINKAGE | 50. 06410 CASE SHOE |
| 16. 06503 BOTTOM BUMPER PLATE | 32. 06419 PLUNGER SPRING PIN | 51. 06608 LEVER RIVET |
| 17. 05506 CASE PIN | 33. 06414 PLUNGER | |
| | 34. 06508 PLUNGER SPRING | |